

Freedom Scientific's

# SARA™

## Scanning and Reading Appliance

**Effortless, affordable reading of books and everyday documents.** Freedom Scientific's **SARA™** (Scanning and Reading Appliance) is an affordable and easy-to-use solution for reading a wide variety of printed material, including books, mail, newspapers, magazines, and so much more. **SARA** uses the latest in advanced optical character recognition technology to scan text and then read it aloud in crisp, clear speech. **SARA** automatically stores and remembers the contents of hundreds of thousands of scanned pages.

### Start reading right away.

You can start using **SARA** right out of the box, with no experience or training. Just place your book or document on the scanning area, and press the scan button. **SARA** automatically scans and recognizes the text and reads it to you. During the reading, you can adjust the voice rate and volume as well as fast forward and rewind.

If you want to take time and examine a document in detail, simply pause the reading and use the intuitive navigational keys to read a word or a line at a time. You can even spell out words to get a better understanding of what is being spoken.


If you need assistance, you can use the Help button to quickly remind yourself of any button's function. For more assistance, **SARA** includes helpful manuals and complete documentation.

### Choose your preference.

**SARA** is designed with both the practical and leisure needs of the blind or low vision user in mind. You can customize the speech rate, volume, and type of reading voice from **SARA's** built-in RealSpeak™ synthesizer to suit your particular needs.

For the low vision user, **SARA** can be attached to a TV or computer monitor, providing colorful, large print access to complement speech. You can even change the print type style, color, size, and spacing to fit your needs.

Whether you're enjoying the latest best seller or studying a complicated insurance policy, Freedom Scientific's **SARA** makes reading a breeze.

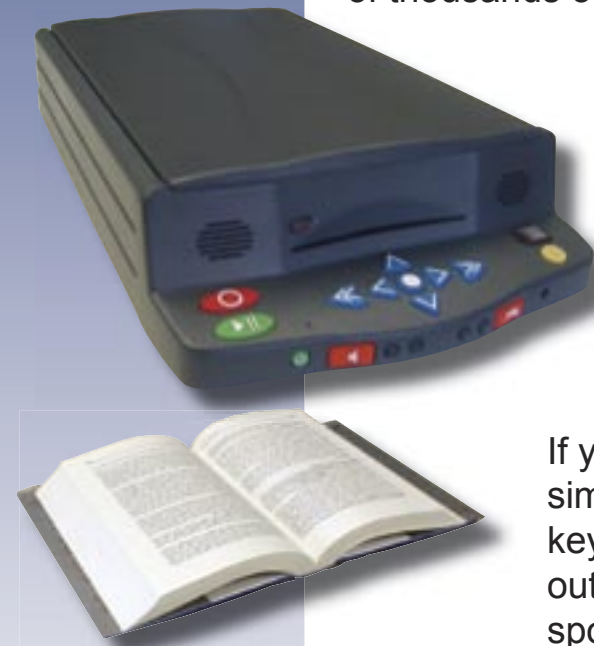

Freedom Scientific

# SARA™

Scanning and Reading Appliance



Large color-coded keys with raised marking make the operation simple.



## More SARA Features

- CD player for reading books saved on disk
- Front mounted stereo speakers
- Front audio jack for stereo headphones
- Rear power jack
- Built-in mic
- TV Out connector for those who want to view scanned documents on a TV using a video cable
- VGA Out for connection to a computer monitor
- USB port to add a keyboard or mouse.
- Support for scanning and reading in multiple languages

- Size: 20 in. x 3.5 in. x 12 in. (50.8 cm. x 8.89 cm. x 30.48 cm.)
- Approximate weight: 18 lbs. (8.16 kg.)
- 20 GB hard disk drive
- 256 MB RAM, 600 MHz processor (x86 compatible)
- 100 - 240 volt power

### Contact your local dealer or contact us at:

Freedom Scientific, Blind/Low Vision Group  
11800 31st Court North  
St. Petersburg, Florida 33716-1805  
Sales: 800-444-4443  
Fax: 727-803-8001  
info@FreedomScientific.com  
www.FreedomScientific.com

